

CONTENTS

Foreword

Preface

Contents

Abbreviations used

Chapter 1	-	Coach
Chapter 2	-	Shell
Chapter 3	-	Bogie
Chapter 4	-	Air Brake System
Chapter 5	-	Vacuum Brake System
Chapter 6	-	Bogie mounted Air Brake System
Chapter 7	-	Train Lighting (Non-AC coaches)
Chapter 8	-	Air Conditioned Coaches
Chapter 9	-	Draw & Buffing Gear
Chapter 10	-	Rolling Gear
Chapter 11	-	Interior Fittings
Chapter 12	-	Painting

Appendices

Appendix A	Transportation Codes for Coaches
Appendix B	Must change items during POH of High Speed Coaches
Appendix C	Modifications in BG Coaching Stock
Appendix D	List of RDSO's Technical pamphlets
Appendix E	Standard integrated modular pit line for unified maintenance
Appendix F	Maintenance Schedules
Appendix G	IOH format

Index

CHAPTER 1

COACH

	Contents	Page No.
101	Introduction	1
102	Codal life of coaches	1
103	Periodicity of Periodic Overhauls	1
104	Periodic Overhaul	2
105	Lifting the coach body	2
106	Lowering the coach body	2
107	Examination of Trains	15
108	Maintenance pattern for coaching trains	17
109	Washing & Cleaning of Coaches	19
110	Conditions required for Maintenance of 24 Coach trains	21
111	Maintenance practices in open line depot	22
112	Maintenance schedules to be followed in coaching depots	27
113	Primary/Secondary maintenance	28
114	Schedule 'A' Examination	30
115	Schedule 'B' Examination	31
116	Detachment a Coach	31
117	Schedule 'C' Examination	32
118	Special Schedule	33
119	Procedure for sending the coaches to shops for POH	33
	Annexure 1.1	
	Brake Power Certificate	35
	Annexure 1.2	
	DRS Card in the train showing condition of mechanical equipments	37
	Annexure 1.3	
	Warranty Card	38
	Annexure 1.4	
	Coach failure report	39
	Annexure 1.5	
	Warranty claim form for Workshop	40
	Annexure 1.6	
	Warranty claim form for open line	41

CHAPTER 2

SHELL

	Contents	Page No.
201	Description	1
202	Body Repairs	2
203	Roof	6
204	Repairs to Door Handles	8
205	Repairs to Door Pivot	8
206	Repairs to Partition wall, Seat Pillar/mounting plate	8
207	Repairs to Draw & Buffing gear support structure	8
208	Repairs to Body Bolster	8
209	Repairs to Centre Pivot	8
210	Water Tank Support Structure	8
211	Repairs to Floor Channel	8
212	General	9
213	List of Tools & Plants	9
214	Examination & Repair practice in Carriage maintenance Depot	9

CHAPTER 4
AIR BRAKE SYSTEM

Contents	Page No.
401 Introduction	1
402 Classification of Air Brake System	1
403 Principle of Operation of twin pipe graduated release Air brake system	1
403a Charging the brake system	1
403b Brake application stage	1
403c Brake release stage	2
404 Air Brake Subassemblies	2
405 Common pipe bracket	2
406 Intermediate Piece (Sandwich piece)	2
407 Air brake hose	2
407a Brake pipe & Feed pipe hoses	2
407b Test procedure	3
408 Cut off angle cock	3
408a Overhauling of Cut of angle cock	4
408b Tools and Equipments	4
408c Procedure	4
408d Testing of Cut off angle cock	5
409 Brake Cylinder	5
409a Overhauling of Brake Cylinder	6
409b Tools and equipments	6
409c Dismantling of Brake cylinder	6
409d Cleaning of parts	7
409e Replacement of parts	7
409f Inspection and repair of the parts	7
409g Testing of Brake cylinder body for leakage	7
409h Assembly of Brake cylinder	7
409i Testing of brake cylinder	7
410 Dirt Collector	9
410a Salient features	9
410b Tools and fixtures for overhauling	10
410c Procedure for overhauling	10
410d Testing of Dirt collector	11
411 Auxiliary Reservoir	12
411a Salient features	12
411b Tools and equipment for overhauling	12
411c Procedure for overhauling	12
411d Testing of auxiliary reservoir	13
411e Safety precautions	13

412	Guard's Emergency Brake Valve	13
	412a Salient features	13
	412b Tools and fixtures for overhauling	14
	412c Procedure for overhauling	14
	412d Testing of guard's emergency brake valve	14
	412e Safety precautions	14
413	Slack Adjuster	15
	413a Salient features	15
	413b Overhauling of slack adjuster	15
	413c Procedure for overhauling	16
	413d Lubrication	16
	413e Safety precautions	16
	413f Testing of slack adjuster	16
	413g Painting	17
	413h Procedure for brake rigging setting & measurement of 'A' and 'e' dimensions	18
	413i Safety precautions	18
414	Distributor Valve	19
415	C3W Distributor Valve	19
	415a Operation of C3W Distributor valve	19
	415b Periodicity of overhauling	21
	415c Overhauling	21
	415d Tools and fixtures for overhauling of C3W Distributor valve	22
	415e Overhauling procedure	22
	415f Testing of Distributor valve	22
	415g Test procedure	22
416	KE Distributor Valve	26
	416a Operation of KE distributor valve	26
	416b Overhauling procedure	29
	416c Testing of distributor valve	29
417	Test report proforma for C3W/KE Distributor Valve	29
418	Passenger Emergency alarm system device	31
419	Passenger emergency alarm signal device	31
	419a Overhauling	31
	419b Tools and equipment	31
	419c Disassembly	31
	419d Cleaning of parts	32
	419e Replacement of parts	32
	419f Assembly	32
	419g Testing of passenger emergency alarm signal device	32
420	Passenger emergency alarm valve	33
	420a Overhauling of PEAV	33
	420b List of tools and fixtures	34
	420c Procedure for overhauling	34

420d	Cleaning of parts	34
420e	Inspection and replacement of parts	34
420f	Assembly	35
420g	Test procedure for PEAV	35
421	Check valve	36
421a	Tools and plants	36
421b	Procedure for overhauling	36
422	Isolating cock	37
422a	Tools and plants	37
422b	Procedure	37
422c	Testing of ball type isolating cock	38
423	Round Trip examination	38
424	Maintenance Schedule A (Monthly examination)	38
425	Maintenance Schedule B (Tri-monthly examination)	39
426	Maintenance Schedule C (Half yearly examination)	39

Annexure 4.1

POH kit of C3W Distributor Valve	40
----------------------------------	----

Annexure 4.2

POH kit for KPISL Distributor Valve	41
-------------------------------------	----

Annexure 4.3

POH kit for Cut off angle cock, for 2 way dirt collector	42
--	----

Annexure 4.4

Single Car Test	43
-----------------	----

Annexure 4.5

Rake Test	48
-----------	----

CHAPTER 5
VACUUM BRAKE SYSTEM

Contents	Page No.
501 General Description	1
502 Maintenance at Workshop	1
503 Lifting Shop	1
504 Overhaul of components	5
505 Assembling and testing of Vacuum Cylinder	8
506 D.A. Valve (Escort- Knorr D.A. Valve)	8
507 Slack Adjuster	9
508 Assembling Brake system on coach	10
509 Adjustment of brakes	10
510 Adjustment of Slack Adjuster	11
511 List of tools and plants	11
512 Trouble Shooting on Vacuum Brake	12

CHAPTER 6
BOGIE MOUNTED AIR BRAKE SYSTEM

Contents	Page no.
601 General	1
602 Design features of the system	1
603 Composite brake block	1
604 Working Principle	4
605 Comparison of important parameters	4
606 Maintenance Instructions	5
607 Special Precautions to be taken during Maintenance	5
608 Description and maintenance of Bogie mounted Brake Cylinders	6

CHAPTER 7
TRAIN LIGHTING (NON-AC COACHES)

	Contents	Page no.
701	Introduction	01
702	General Description of Major Equipment	02
703	Trip Examination	04
704	Fortnightly Examination	10
705	Monthly Examination	10
706	Quarterly Examination	13
707	Half Yearly Examination (IOH)	13
708	POH Schedule	15
709	Do's And Don'ts For Major Equipments	20

CHAPTER 8

AIR CONDITIONED COACHES

	Contents	Page no.
801	Introduction	01
802	Maintenance Schedule for Self Generating Air Conditioned Coaches fitted with Under Slung equipment	01
803	Open Line Maintenance schedule for Roof Mounted Ac Package Units and its Control Panel	09
804	Six Monthly Schedule	12
805	POH Schedules of Under Slung Self Generating (SG) Type Air Conditioned Coaches	12
806	POH Schedule for Self Generating (SG) Type AC Coaches fitted with Roof Mounted Ac Package Unit	21

CHAPTER 9
DRAW AND BUFFING GEAR

Contents		Page No.
901	Enhanced Draw gear & Screw Couplings	1
	901a Description & Guidelines	1
	901b Inspection & Maintenance in POH	1
902	ICF Type Buffer of BG mainline coaches	5
	902a Description and Guidelines	5
	902b Inspection and Maintenance in workshops	6
903	Examination and repair in Carriage Maintenance depot	8

CHAPTER 10
ROLLING GEAR

Contents	Page No.
1001 Wheel & Axle	1
1002 Category of Wheels	4
1003 Repair Procedure for different categories of wheels	4
1004 Axle box assembly	8
1005 Roller Bearings	8
1006 Maintenance when bearing is dismantled	14
1007 Precautions for maintenance of roller bearing	17
1008 Roller bearing defects and remedial measures	17
1009 Examination and repair practice in Carriage maintenance depot	18
 Annexure 10.1	
Ultrasonic testing of axles	21

CHAPTER 11

INTERIOR FITTINGS

Contents	Page No.
1101 General Description	1
1102 Amenity fittings for coaching stock	1
1103 Furnishing material on passenger coaches	6
1104 Window	7
1105 Floor	9
1106 Seats and berths	13
1107 Doors	14
1108 Vestibule	16

CHAPTER 12

PAINTING

Contents	Page No.
1201 General	1
1202 Paint schedule 'A'	1
1203 Paint schedule 'C'	4
1204 Interior painting	4
1205 Painting of parts	4
1206 Marking of coaches together with exterior	4
1207 Tools & Plants for Painting	5
Annexure 12.1	
'A' Schedule	6
Annexure 12.2	
'C' Schedule	6

LIST OF APPENDIX

Appendix A	Transportation Codes for Coaches
Appendix B	Must change items during POH of High Speed Coaches
Appendix C	Modifications in BG Coaching Stock
Appendix D	Maintenance Schedules
Appendix E	RDSO Technical pamphlets
Appendix F	Standard integrated modular pitline for unified maintenance
Appendix G	IOH format